



PLATINUM

PT-DCSM CAMERA STABILIZER MOUNT

QUICK SETUP GUIDE


Before using your new product, please read these instructions to prevent any damage.

PACKAGE CONTENTS

- Handheld camera stabilizer mount that will hold a camera or camcorder weighing up to 2.2 lbs (1.0 kg)
- Three-piece counterbalance weight set
- *Quick Setup Guide*

FEATURES

- Improves stability and reduces shake in video shots
- Provides full motion using a gimbal-design ball joint
- Adjusts the camera balance using a three-piece counterbalance weight set

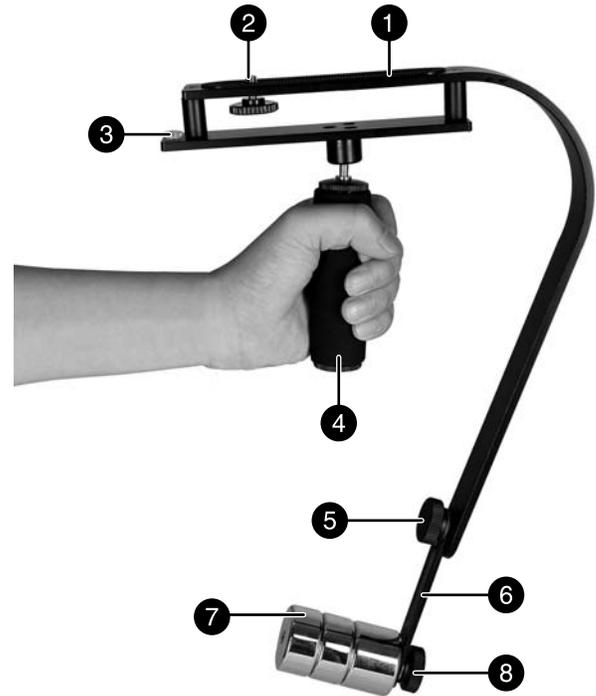

#	ITEM	DESCRIPTION
1	Mounting plate	Mount your camera or camcorder on this plate.
2	1/4-inch mounting screw	Tighten your camera or camcorder onto this screw to secure it to the mounting plate. Slide the camera or camcorder along the mounting plate slot until it balances in a level position.
3	Level	The mounting plate is level when the bubble is in the center of the level.
4	Foam-padded handle	Provides a firm grip for your stabilizer mount.
5	Sliding bracket knob	Tighten this knob to keep the sliding bracket from moving. Loosen this knob to let the bracket slide up or down or side to side to provide balance when you tilt your stabilizer mount.
6	Sliding bracket	After you install the weights and your camera or camcorder, loosen the bracket knob and adjust the bracket length or angle to balance your stabilizer mount.
7	Weight set	Add or remove weights to help level your stabilizer mount.
8	Weight locking knob	Unscrew this knob to add or remove weights. Tighten this knob to secure the weights to your stabilizer mount.

USING YOUR CAMERA STABILIZER MOUNT

- 1 Unscrew the weight locking knob, then slide one or more of the counterbalance weights onto the sliding bracket. Tighten the knob.
 - 2 Align the bottom of your camera or camcorder with the 1/4-inch mounting screw on the mounting plate, then secure your camera or camcorder to the plate with the screw. Slide your camera or camcorder along the mounting plate slot until it balances in a level position. Your stabilizer mount is level when the leveling bubble is in the center of the level. The screw should be tight.
 - 3 Use the foam-padded handle to lift your stabilizer mount. If necessary, adjust the balance by removing one or more of the weights or by loosening the sliding bracket knob and adjusting the angle of the sliding bracket. You can tighten the sliding bracket knob to secure the bracket in place or leave the knob loose to let the bracket slide up or down or from side to side to help maintain the balance as you tilt your stabilizer mount.
- Your camera is ready to shoot smooth, shake-free video.

SPECIFICATIONS

Optimized camera or camcorder weight	2.5 lbs. (1.1 kg)
Dimension (H × W × D)	14.8 × 1.2 × 9.3 in. (37.5 × 3 × 23.5 cm)
Total weight	2.3 lbs. (1.1 kg)
Small weight	0.4 lbs. (0.2 kg) each
Large weight	0.6 lbs. (0.3 kg)

ONE-YEAR LIMITED WARRANTY

CONTACT PLATINUM

For customer service, call 1-800-499-3964.

The Pt logo is a registered trademark of Best Buy.

PLATINUM is a trademark of Best Buy and its affiliated companies. Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 Best Buy. All rights reserved.

Made in China